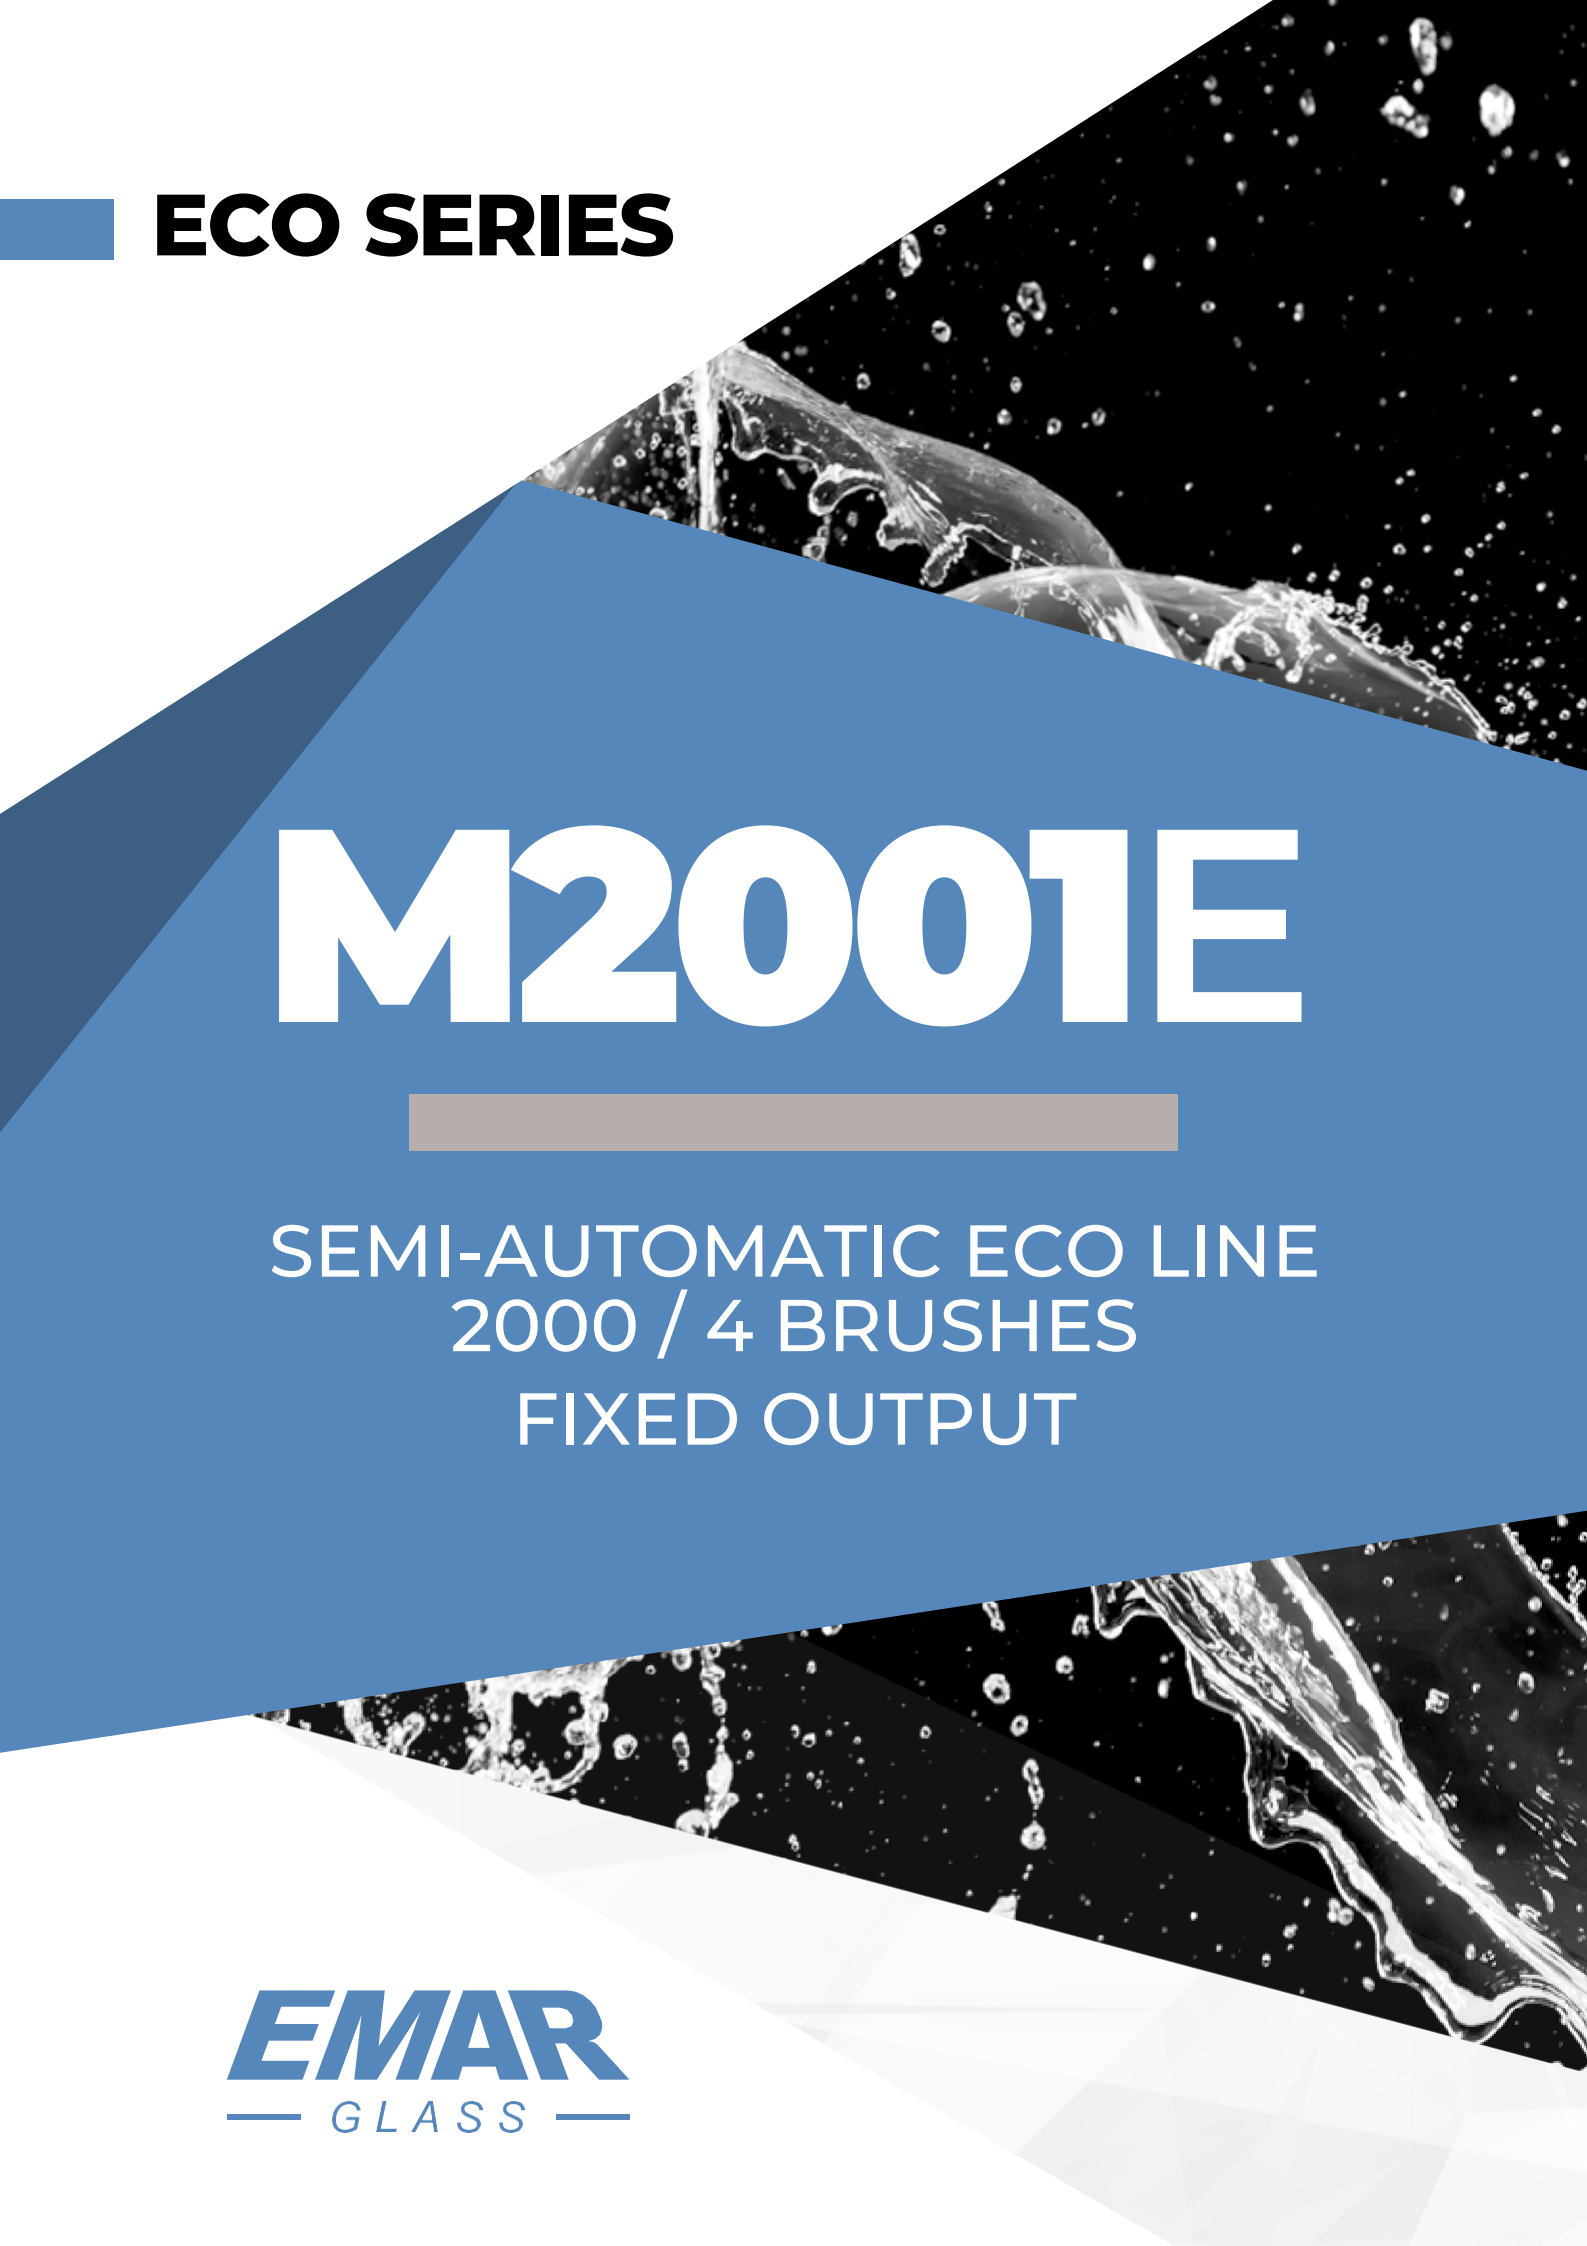


A high-contrast, black and white photograph of water splashing, creating numerous droplets and a dynamic, energetic feel. The image is partially obscured by a large blue geometric shape that serves as a background for the text.


ECO SERIES

M2001E

SEMI-AUTOMATIC ECO LINE
2000 / 4 BRUSHES
FIXED OUTPUT

EMAR
— GLASS —

THE
2025

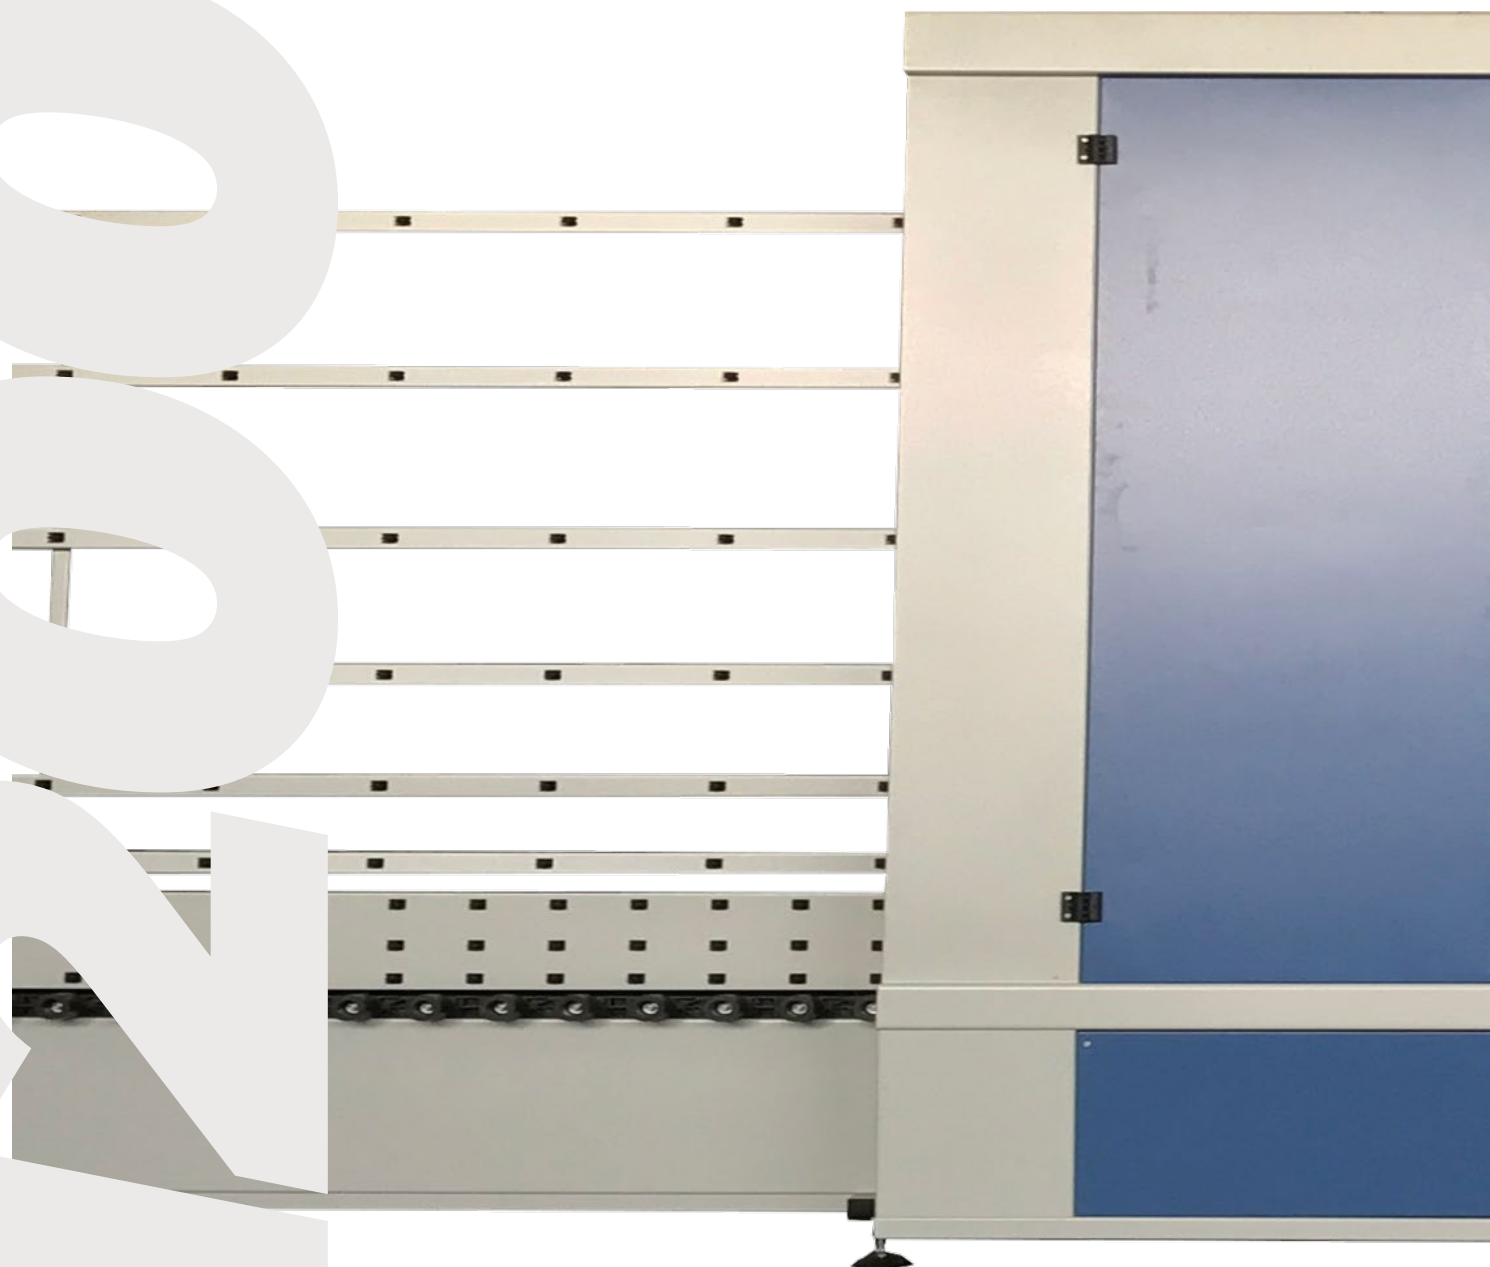

M2001E



Mod. **M2001E** SEMI-AUTOMATIC ECO LINE 2000 / 4 BRUSHES / FIXED EXIT

- All production lines for double glazing adopt a modular concept and can, therefore, be adapted to the needs of the individual customer.
- Composed of 2 m modules the glass is transported via a system of anti-cut rollers with frictioned components to increase operator safety.
- The washing machine body is in powder-coated stainless steel and is 2 meters long. All components in contact with water are corrosion resistant and equipped with 4 brushes of 80 mm diameter with steel shafts and aluminum supports.
- The water management unit is made up of two washing zones with tanks, pumps, filters and internal parts in stainless steel. Thanks to the shape of the tanks, water consumption has been reduced to a minimum, reusing wastewater from one sector to another.
- The thermostat-controlled heating system is standard over the entire range.

M2001E

- *The output module is equipped with a new continuous LED light system to allow better control of the washing quality.*
- *The motorised assembly is made up of double anti-cut rubber rollers mounted on friction systems. The transport is managed by an inverter which allows the processing speed to be increased during the movement of the glass, reducing waiting time to a minimum.*
- *Thanks to the LED light system it is possible to identify any imperfections on the glass.*
- *A laser sensor guarantees high positioning precision of the profile. The pneumatic movement pistons are controlled by oil-filled clearance adjusters and managed by sensors that read the thickness of the glass, to allow the operator to position the profile spacer without any adjustment while working on different glass thicknesses.*
- *The 1 m roller press is equipped with anti-cut friction supports and moves via pneumatic pistons in material treated with bushings.*
- *The machine can be adjusted by the operator to vary the pressing thrust.*
- *The fixed exit is made up of a 3 m module with the glass being transported via a system of anti-cut rollers mounted on frictioned components to increase operator safety.*
- *The machine has been set up for connection to other work modules.*

M2001E

TECHNICAL SPECIFICATIONS

Power supply	400 Vac 3-phase + Neutral 50 Hz
Total consumption	15 Kw 400 Vac 50 Hz
Fan moore	4 Kw 400 Vac 3-phase 50 Hz
Hot water resistance	1.5 kW 230 Vac 50 Hz
Washing brushes	4 standard (optional LOW-E)
Washing zone	2 separate zones with ECO WATER systemj
Washable glass measurements	Min. 350 x 250 h mm approx Max 2000 x 2000 h (TOP OPENING)
Washable thickness	From 3 to 14 mm (optional up to 20mm)
Panel press thickness	50 mm approx
Work direction	From left to right (optional right to left)
Working speed	4 m/minute
Work surface	600 mm approx
Height	3.000 mm approx
Length	14.000 mm approx
Width	1.500 mm approx
Weight	3.000 kg approx

We recommend that water supplied to the washing machine has the following characteristics:

Conductivity	= less than di 10 uS (microSiemens)
Hardness total	= less than 5° F (French degrees)
Salt content	= less than 5 mg/L
Chloride	= less than 5 mg/L
Iron	= less than 0,05 ppm
Torbidity	= less than 0,5 ftu

NB. If the water values are higher than those recommended, the glass washing results may be compromised. If necessary, upon request we can provide equipment for cleaning the water.

M2001E



WATER RECOVERY

Water is a precious resource - the washing system is designed for a double reuse of water, avoiding unnecessary waste while maintaining optimal quality at the end of the process.



LONG-LASTING

Attention to durability over time is synonymous with quality - all parts of the machine in contact with water are made of powder-coated stainless steel, brush supports and tows in aluminium, pipes in stainless steel, and brass spray nozzles.

M2001E



SAFE TRANSPORTATION

The safety of the operator is fundamental, but the glass must be moved for processing. The system adopted allows the glass to be blocked at any time with the rollers moving. All this thanks to an innovative type of transportation.



EASY MAINTENANCE


Thanks to the type of sector construction, maintenance and cleaning are convenient, easy and quick.



PLUG IN COMMUNICATION

All line connections are modular with special plugs and sockets dedicated to strength commands or the control of digital communication signals. The line, as standard, has been set up to work with other work modules from the sealing robot, warehouse transfer or tilting table.

M2001

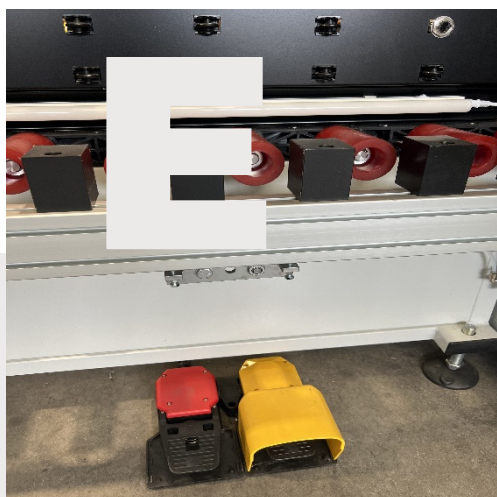


DOUBLE OR TRIPLE GLASS

Thanks to a simple pedal it is possible to define the type of production, double or triple glass.



LASER PRECISION

The manual component of the line is in the assembly module where the operator places the profile. It is therefore essential to give all the references to the operator quickly and precisely. Thanks to the laser reading system it is possible to have high positioning precision and therefore reduce processing times.

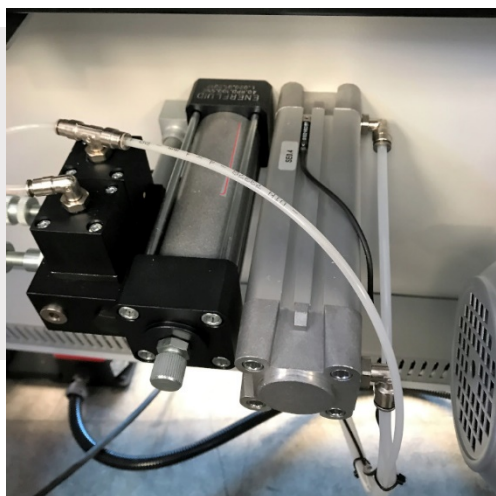

SIMPLE AND RELIABLE

The assembly guarantees perfect positioning of the profile bar through this new system created from a mix of pneumatics and hydraulics.

M2001



VULKOLLAN ROLLER

VULKOLLAN® is a polyurethane renowned for its exceptional resistance to dynamic stress and abrasion, laceration and cuts. This material guarantees long duration over time.




CONTROLS AND ADJUSTMENTS

All controls are situated in the front part of the press and are simple and intuitive, allowing the operator to dynamically and precisely adjust all pressing parameters.


M2001E

LAYOUT

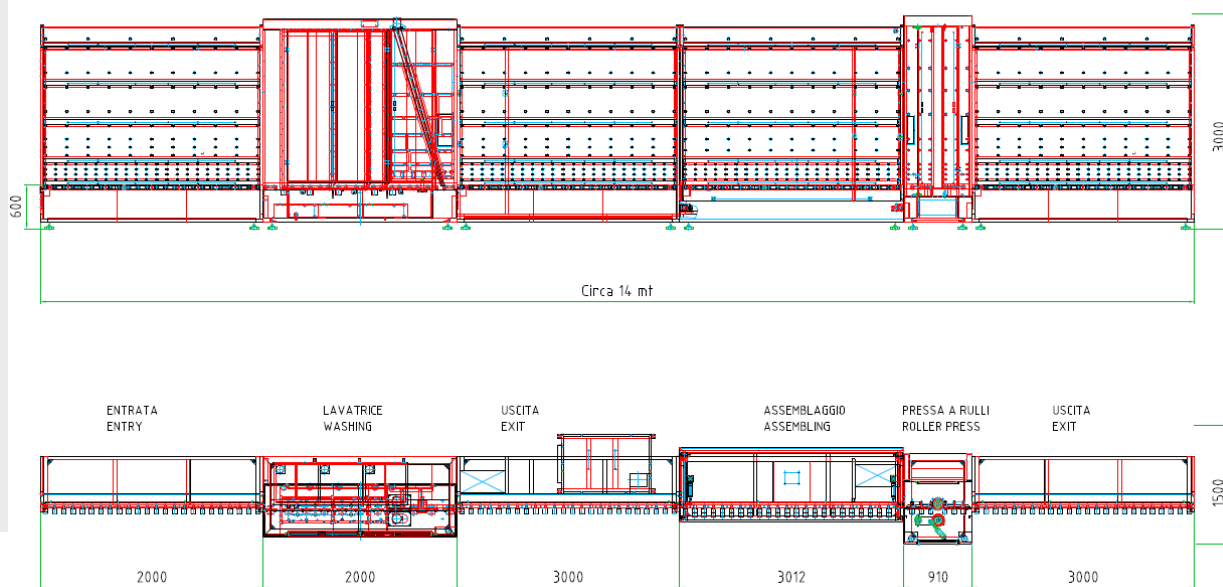

M2001E

OPTIONALS

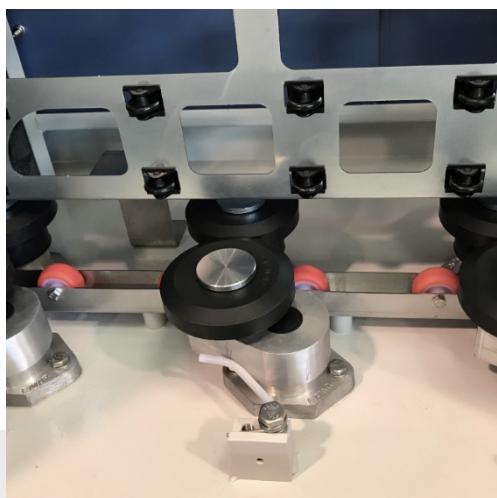

THICKNESSES UP TO 20 mm

Thanks to the self-aligning opening system it is possible to process glass thicknesses from 3 to 20 mm completely automatically.



TILTING EXIT

3 m tilting output module operated by a jack controlled by an electronic inverter. The module can be used both as a fixed warehouse and a sealing table.

MOTORISED ENTRY

The automation of the entrance guarantees safe movement of the glass in a completely autonomous manner.

LOW E BRUSHES

These type of brushes have special bristles that allow the possibility of working with more delicate glass. They are complete components with a stainless-steel shaft



GLASS WORKING EQUIPMENT

www.emarglass.it

